
CR-202

DIGITAL PIANO Owners Manual Kaino Co., Ltd



 **AURA**

<http://www.kainopianos.com>

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep these precautions in a safe place for future reference.



CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE
COVER(ORBACK), OR EXPOSE THIS APPLIANCE TO MOISTURE



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the presence of uninsulated "dangerous voltage" with the product enclosure that may be of sufficient magnitude to constitute an electrical risk to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the instrument.

NOTE:

Before plugging the power cord into an AC outlet, make sure that all the connections have been made.

CAUTION:

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than contained in the operating instructions unless you are qualified to do so. Refer to the service manual for servicing instructions.

- 1) Read and keep these instructions.
- 2) Heed all warnings and follow all instructions.
- 3) Do not use near water, and clean only with a dry cloth.
- 4) Do not block any ventilation openings. Maintain well ventilated conditions around the product. Do not put the product on a bed, sofa or anything that blocks ventilation. Install in accordance with the manufacture's instructions.
- 5) Do not install near any heat sources such as radiators, heat registers, stoves, or any other apparatus (including amplifiers) that produces heat.
- 6) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into you outlet, consult an electrician for replacement of the obsolete outlet.
- 7) Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the unit.
- 8) Only use attachments/accessories specified by the manufacturer.
- 9) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the unit. When a cart is used, use caution, manufacturer, or sold with the unit.
- 10) Unplug this unit during lightning storms or when unused for long periods of time.
- 11) Refer all serving to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen onto the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 12) The unit should not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, should be placed on it.obsolete outlet.



CONTENTS

Setting up	1	Recording system	6
Power connection.....	1	Record.....	6
LCD Display.....	1	Play.....	6
Volume.....	1	Delete.....	6
External jacks.....	1		
Playing demo songs	2	Piano teaching system	6
Playing a demo song.....	2	Demo	6
		Teach	6
		Selectleft or right hand	7
Playing sounds	3	USB MIDI interface	7
Sound selection.....	3	USB MIDI interface.....	7
Split.....	3		
Effect.....	3	Foot pedals	7
Dual.....	4	Foot pedals.....	7
Auto accompaniment	4	Appendix	8
Style selection.....	4	Specification.....	8
Start Accompaniment.....	5	Songs list.....	8
FillIn.....	5	Sounds list.....	9
Tempo setting.....	5	Styles list.....	10
Auto bass chord.....	5	Troubleshooting.....	11
		Installation.....	12

SETTING UP

Power connection

Follow the instructions below according to the power source you intend to use.

- 1** Make sure that the [POWER] button is set to OFF.
- 2** Connect the power cord to the digital piano and plug it into an active outlet.
- 3** Minimize the volume of the digital piano.
- 4** Turn the POWER ON.

WARNING

- Do not use a voltage other than the indicated power supply voltage. Use of a voltage other than indicated may cause fire or electrical shock.
- Unplug the power cord when not using the instrument, or during electrical storms.

LCD display

After power on, the first line displays the number and name of the current sound used on the keyboard. And the second line displays the number and name of the current style, as well as the tempo.

Voice

Styl



Tempo

 
Volume

1 Master volume

Rotate the master volume knob to increase or decrease the volume. Master volume influences keyboard volume and the accompaniment volume

2 Accompaniment volume

Rotate the accompaniment volume knob to increase or decrease the volume. Accompaniment volume knob influences the accompaniment volume only.

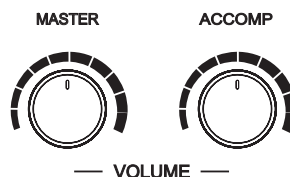

External jacks

Phones jack

A standard pair of stereo headphones can be plugged into this jack for private listening. The internal stereo speaker system will be automatically shut off when a head phone is plugged into the PHONES jack. DO NOT listen with the headphone at high volume for long periods of time. Doing so may cause hearing loss.

Line out/In jacks

The Line out jack deliver the output of the digital piano for connection to an amplifier, stereo system, mixing console, etc...

The Line in jack is used to connect other audio device's line out/earphone out to the digital piano.

PLAYING DEMO SONGS

USB MIDI jack

 
 
 
You can connect the piano with your computer with the USB MIDI socket. With your favorite music editor software, you can melodize, record, or just play for fun.

Power jack

Please use power supply that is consistent with the description label of the power jack, also refer to the specification.

To connect the digital piano with other devices, please pull off the power pin, and power off the piano.

Before power off the piano, please turn the volume knob to minimum.

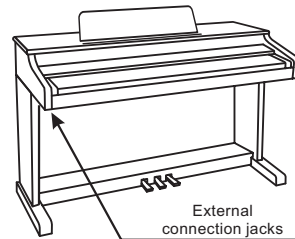

Fuse

 
It's strongly recommended you invite a professional service person to change the fuse. You must use the fuse of 1.5A capacity.

PLAYING DEMO SONGS

In this section, you will learn how to play the demo songs. The digital piano has a large selection of demo songs. Once you have set up your digital piano, try listening to the pre-programmed demonstration songs. You can also use the piano teaching system to learn these demo songs, for more information about piano teaching system, please turn to the "piano teaching system" chapter.

Playing a demo songs

- 1 Press the [DEMO] button to play the main demo song.
Press the [DEMO] button again to stop the demo.
- 2 Select another demo song.
Hold down one of the 88 keys on the keyboard and then press the [DEMO] button to start a demo song.
Each key on the keyboard represents a song.
- 3 Enjoy the demo song.
Press the [Demo] button to stop the song.

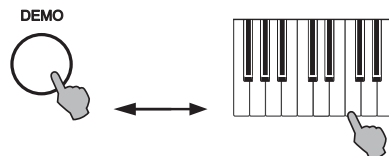


PLAYING SOUNDS

Sound selection


- 1 Select a sound by direct buttons.

 Press the named sound button to directly select a sound.




- 2 Select sounds 00 to 87.

 Hold down the [OTHERS] button, then press one of the 88 keys on the keyboard to select a sound. Each key represents a sound.



- 3 Select sounds 88 to 128.

 Hold down the [OTHERS] button, then press two of the 88 keys on the keyboard to select a sound. The left one of the two keys represents a sound.



Split (playing different sounds with the left and right hands)

When you choose the split function, the keyboard will be split into two parts: the right and the left hand part.

 
- 1 Select a sound for the left hand.

- 2 Press the [SPLIT] button, and the split light turns on, the digital piano enters split mode.

- 3 Select a sound for the right hand.

- 4 Play the piano in both hands.

- 5 Press the [SPLIT] button, and the split light turns off, the digital piano exits split mode.

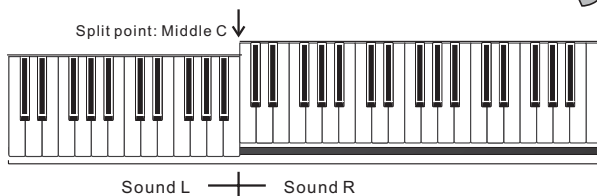

Effect

- 1 Press the [EFFECT] button, the effect light turns on, and the digital piano keyboard effect is active.

 
- 2 Press the [EFFECT] button, the effect light turns off, and the digital piano keyboard effect is inactive.



Dual (Playing two sounds simultaneously)

The first sound can be selected by the method above.
Then press the DUAL button, (led light will turn on) Lastly, select your "layer" or "dual" sound.

- 1 Select a sound using the method mentioned above. .
- 2 Press the [DUAL] button, and the dual light turn on, the digital piano enters dual mode. .
- 3 Select the second sound.
- 4 Play the newly created "layer" of two sounds.



- Note: A good layer to try is PIANO & STRINGS. Experiment and enjoy the possibilities.
- 5 Press the [DUAL] button, the dual light turns off, the digital piano exits dual mode.

 
AUTO ACCOMPANIMENT

The auto accompaniment function puts a full band at your fingertips. Using it, all you have to do is play the chords with your left hand as you perform, and the selected accompaniment style matching your music will automatically play along, instantly following the chords you play. With auto accompaniment, a solo performer can enjoy playing with the backing of an entire band or orchestra.


The digital piano features 88 styles featuring a variety of different musical genres.
Try selecting some of the different styles and play with the auto accompaniment.

Style selection

- 1 Select a style by direct buttons.
Press the named style button to directly select a style.



 - 2 Select styles 00 to 87.
Hold down the [OTHERS] button, then press one of the 88 keys on the keyboard to select a style. Each key represents a style.
- 3 Select styles 88 to 99.
Hold down the [OTHERS] button, then press two of the 88 keys on the keyboard to select a style. The left key of the two keys represents a style.

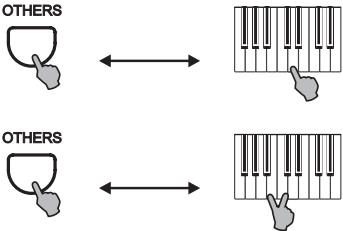


AUTO ACCOMPANIMENT

Start accompaniment

1 There are two methods to start the accompaniment.

 - Press the [START/SOP] button to start the accompaniment immediately.
- Press the [SYNC/FILLIN] button, then once you press the keys on the accompaniment keyboard area, the accompaniment will start automatically.



2 Press the [START/SOP] button again to stop the accompaniment.

 
Fillin

When the accompaniment is in process, press the [SYNC/FILLIN] button to insert a fillin section.

Tempo setting

Press the [Tempo+] button and the [Tempo-] button to increase or decrease the tempo.

The tempo can be a value from 30 to 240 beats per minute.



Auto bass chord

 
Press the [CHORD] button, the chord light turns on, fingered chord is active.

Press the [CHORD] button, the chord light turns off, fingered chord is inactive.



Playing fingered chords

The following is fingered chord list of C chord.

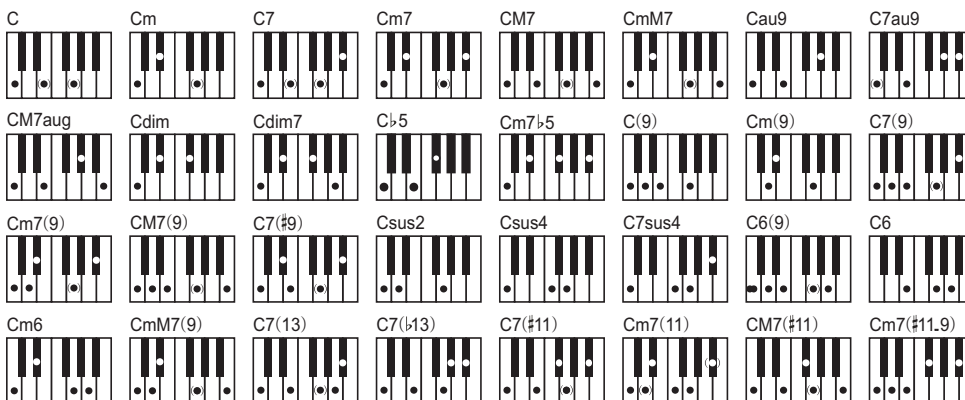

RECORDING SYSTEM

 
With the powerful and easy-to-use Recording System, you can record your own keyboard performance and create your own complete, fully orchestrated compositions.

Data that can be recorded for a user song:

- Tempo
- Accompaniment style number
- Section changes and their timing
- Chord changes and their timing
- Accompaniment volume
- Note ON/OFF (key press and release)
- Sound change settings

Record

- 1 Press the [RECORD] button, the record light turns on, metronome starts, the recording system is ready to use.
- 2 Start playing to record. If press the [PLAY] button before playing, the recording system will record rest notes before playing.
- 3 Press the [RECORD] button to stop recording.



Play

Press the [PLAY] button to do playback.

Delete

If you do new recording, old data will be overwritten.

PIANO TEACHING SYSTEM

The Piano Teaching System feature help you learn to play the right or the left hand of the songs.

 
Demo

- 1 Hold down one of the 88 keys, then press the [DEMO] button to start the song playing.
- 2 Song ends or press the [DEMO] button again to stop the song playing.



Teach

In this step, you will learn the right key to play the melody. The melody will not proceed until you play the correct note, allowing you to learn at your own pace. The accompaniment will not continue unless you play the correct key of the melody.



USB MIDI INTERFACE/FOOT PEDALS

- 1 Press the [LEFT] button or [RIGHT] button to select melody to learn.
- 2 Hold down one of the 88 keys, then press the [TEACH] button to start teaching.
- 3 Follow the accompaniment and press the corresponding key to play the melody.

Select left or right hand melody to play

In the teaching system, left hand melody, right hand melody or both melodies can be selected to learn.

 
- 1 Press the [RIGHT] button and the [RIGHT] light turns on. This means the right hand melody is selected to learn.
- 2 Press the [LEFT] button and the [LEFT] light turns on. This means the left hand melody is selected to learn.
- 3 Press the [RIGHT] and [LEFT] buttons, and make both the [RIGHT] and [LEFT] lights turn on. This means both the right hand melody and the left hand melody are selected to learn.
- 4 After power on, the default melody setting is the right hand melody.

USB MIDI INTERFACE

USB MIDI interface

MIDI is abbreviation of "Musical Instrument Digital Interface", and is a world-standard communication interface that allows MIDI compatible with other instruments and computer to play, compose and edit music etc.

Use an usb cable to connect the digital piano to your computer, then using MIDI software, you can record midi music or playback your midi music.

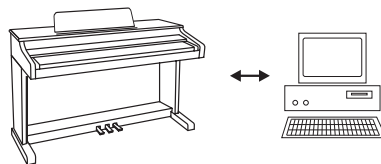

FOOT PEDALS

Foot pedals

The piano has three foot pedals at the bottom.

- 1 Soft pedal is the left pedal. Step on the pedal to make the notes soft, and release the pedal to restore normal.
- 2 Sostenuto pedal is the middle pedal. Press notes to be sustained firstly, then step on the pedal to make these notes to sustain, and play other notes without sustain.
- 3 Sustain pedal is the right pedal. Step on the pedal to make the notes sustain, and release the pedal to restore normal.

SPECIFICATION

Keyboard	Standard 88 keys piano keyboard
Polyphony	64
Display	LCD
Keyboard Control	Touch sensitive
Instruments	128, General MIDI
Styles	88
Style Control	Start, sync, stop, fill in
Auto Bass Chord	Multi-finger
Teaching System	Teaching system help to learn playing step by step with high efficiency
Drums	1 Drum Kits
Keyboard Split	Split into 2 keyboards with different instruments to play
Timbre Control	Effect
Foot pedals	soft, sostenuto and sustain
External jacks	Power, Headphone, Line in/out, USB MIDI
Speakers	130mm*2
Cubage	Length*Width*Height=1330mm*530mm*830mm

The piano specification is subject to change without notice.




















































SONGS LIST

Little Hansi	Bae NO67	Caouté dance
little bee	Bae NO77	Polly's dreaming and a awakening
Bae NO26	Bae NO80	Adagio
Bae NO27	Bae NO91	La Chevaleresque
Bae NO28	Bae NO95	Marcia alla turca
Bae NO29	Bae NO103	Turkish march
Bae NO30	Bae NO104	Menuett
Bae NO31	Lovely home	Moments Musicaux Op. 943
Waltz home	Susani	Prelude
Lochmond	Baspye	For Elise
Bae NO46	Resolution	Originality Music NO13
Goodbye winter	Russia ballad	Radetzky March
Bae NO48	Elusa ballad	Slavonic dances NO10
Bae NO49	Germany ballad	Gulliaumelell
Bae NO52	Say	UngarschetanzeNr5
When I rish eyesare smiling	Liu Yang river	By chance jazz
Innight song	Pastorale	The blue fanube
Green leeves	Child game	Maple leaf rag
Bae NO60		What shall I do
Bae NO61		Scherzo excerpt Op31
Oh susanna		The second opportunity
Bae NO66		Chopin piano song 1
Bae NO72		Chopin piano song 2
little bird will marry		
Tercet		
Before many years		
I go to spring side		
Bae NO84		
Switzer ballad		
Bae NO88		
Little sister		
Leave minka		
Poor		
Love al happy		
Lovely May		
Cuckoo		
Bae NO16		
Bae NO18		
Bae NO23		
Bae NO25		
Bae NO37		
Bae NO40		
Bae NO55		
Bae NO57		

SOUNDS LIST










































Sound selection 1

(“OTHERS” + 1 key)

	00 Grand Piano
	01 Bright Piano
	02 El. Grd Piano
	03 Honky-Tonk Piano
	04 El. Piano 1
	05 El. Piano 2
	06 Harpsichord
	07 Clavi
	08 Celesta
	09 Glockenspiel
	10 Music Box
	11 Vibraphone
	12 Marimba
	13 Xylophone
	14 Tubular Bells
	15 Dulcimer
	16 Drawbar Organ
	17 Percussion Organ
	18 Rock Organ
	19 Church Organ
	20 Reed Organ
	21 Accordion
	22 1-Harmonica
	23 Tango Accordion 2
	24 Ac.Guitar (Nylon)
	25 Ac.Guitar (steel)
	26 El.Guitar (Jazz)
	27 El.Guitar (clean)
	28 El.Guitar (muted)
	29 Overdriven Guitar
	30 Distortion Guitar
	31 Guitar harmonics
	32 Acoustic Bass
	33 Finger Bass
	34 Pick Bass
	35 Fretless Bass
	36 Slap Bas 1
	37 Slap Bas 2
	38 Syn Bass 1
	39 Syn Bass 2
	40 Violin
	41 Viola
	42 Cello
	43 Contrabass
	44 Tremolo String
	45 Pizzicato String
	46 Harp
	47 Timpani
	48 Strings Ensemble 1
	49 Strings Ensemble 2
	50 Synth String 1
	51 Synth String 2
	52 Choir Aahs
	53 Voice Oohs
	54 Synth Voice
	55 Orchestra Hit
	56 Trumpet
	57 Trombone
	58 Tuba
	59 Mute Trumpet
	60 French Horn
	61 Brass Section
	62 Synth Brass 1
	63 Synth Brass 2
	64 Soprano Sax
	65 Alto Sax
	66 Tenor Sax
	67 Baritone Sax
	68 Oboe
	69 English Horn
	70 Bassoon
	71 Clarinet
	72 Piccolo
	73 Flute
	74 Recorder
	75 Pan Flute
	76 Bottle Blown
	77 Shakuhachi
	78 Whistle
	79 Ocarina
	80 Lead 1 (Square)
	81 Lead 2 (sawtooth)
	82 Lead 3 (Calliope)
	83 Lead 4 (Chiff)
	84 Lead 5 (Charang)
	85 Lead 6 (Voice)
	86 Lead 7 (fifths)
	87 Lead 8(bass+lead)

Sound selection 2

(“OTHERS” + 2 keys)

	88 Pad 1 (fantasia)
	89 Pad 2 (warm)
	90 Pad 3 (polysynth)
	91 Pad 4 (choir)
	92 Pad 5 (bowed)
	93 Pad 6 (metallic)
	94 Pad 7 (halo)
	95 Pad 8 (sweep)
	96 Fx 1 (rain)
	97 Fx 2 (soundtrack)
	98 Fx3 (crysta)
	99 Fx4 (atmosphere)
	100 Fx5 (Brightness)
	101 Fx6 (GoblinFx)
	102 Fx7 (Echoes)
	103 Fx8 (Sci-Fi)
	104 Sitar
	105 Banjo
	106 Shamisen
	107 Koto
	108 Kalimba
	109 Bagpipe
	110 Fiddle
	111 Shanai
	112 Tinkle Bell
	113 Agogo
	114 Steel Drm
	115 Woodblock
	116 Taiko Drm
	117 Melodic Tom
	118 Synth Drm
	119 Revs Cym
	120 Cir Noise
	121 Breath Noise
	122 Seashore
	123 Bird Tweet
	124 Teleph. Ring
	125 Helicopter
	126 Applause
	127 Gunshot
	128 Standard Set

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE/SOLUTION
<ul style="list-style-type: none"> The speaker produces a click or pop when 	<p>This is normal and is no cause for alarm.</p>
<ul style="list-style-type: none"> No sound results when the keyboard is played. 	<ul style="list-style-type: none"> Make sure the power is on. The master volume setting could be set too low. Check whether there is a headphone plugged in, when a headphone is plugged in, the speaker will not sound.
<ul style="list-style-type: none"> Using the mobile phone, noise is produced. 	<ul style="list-style-type: none"> Using the mobile phone close to the keyboard may produce interference. To prevent this, turn off the phone or use it further away from the keyboard.
<ul style="list-style-type: none"> The Auto Accompaniment does not start, even when Synchro Start is in standby condition and a key is pressed. 	<ul style="list-style-type: none"> You may be trying to start the accompaniment by playing a key in the right-hand range of the keyboard. To start the accompaniment with Synchro Start, make sure to play a key in the left hand range of the keyboard (ending at the 19th key from the left).
<ul style="list-style-type: none"> The pedal has no effect, or the sound continuously sustains even when the damper pedal is not pressed. 	<ul style="list-style-type: none"> The pedal cord plug is not connected. Securely insert the pedal cord plug into the proper jack.
<ul style="list-style-type: none"> Data loss after the power is OFF. 	<ul style="list-style-type: none"> The battery inside the piano needs to be changed, please asked qualified service personnel to change the battery for you.
<ul style="list-style-type: none"> Auto Accompaniment chords are recognized regardless of the split point or where chords are played on the keyboard 	<ul style="list-style-type: none"> Check whether the fingering mode is set to "Multi-Fingering" or not. If the full fingering mode is selected, chords are recognized over the entire range of keyboard, irrespective of the split point setting.
<ul style="list-style-type: none"> The sound seems different even in the same voice. 	<ul style="list-style-type: none"> This is normal, because some acoustic instruments do not have that high or low pitch, it's produced by the sound synthesizer.

INSTALLATION

